

User Handbook

SERIES 6200

EXOTM
EXTREME COMFORT

Nightingale



www.transseas.com



Congratulations, this CXO™ is yours.

Please read and understand this user handbook
before operating this office chair.



6200D



6200



6200D-ti



 
6200D-HD



Ti & HD Arm

Press & hold button to adjust
height of arm rest as desired,
release to lock in place.

Using & Adjusting Your CXO™

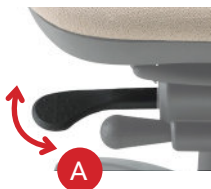

A

Pneumatic Height Adjustment

To lower, tilt the lever up while seated. To raise, tilt the same lever up with no weight on seat.



B

Seat Slider

 
Lift middle-lever up to unlock, move seat to desired position while seated and release to lock.



C

Multi-Position Tilt Lock

To lock in position, turn left-lever up. To unlock, turn lever down. Gently lean into back to activate the positive back lock release.

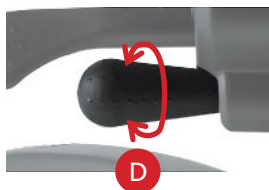

D

Tension Knob

Turn front-knob clockwise to increase tension, turn the same knob counter-clockwise to decrease tension.



E

Arm Height & Width Adjustment

To raise or lower arm height, lift trigger and slide into desired position. To adjust the width, pull out to widen; push in to contract width.



F

Pivot & Arm Pad Adjustment

 
To pivot, press/hold front-button to adjust angle, and release to lock. To adjust slider, press/hold back-button and slide to desired front/back position, and release to lock.



G

Ratchet Height Adjustable Headrest

Simply lift or lower headrest to desired position—locks automatically. Headrest can be tilted to desired angle.

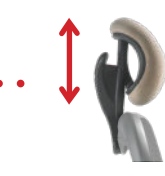

Original Style Headrest (Optional)

Simply lift headrest to desired position—locks automatically. To unlock, lift to top position and slide down.



H

Lumbar Adjustment

To adjust depth of lumbar, push in to increase. To release, press and hold the top reset button and gently pull away from chair. To raise lumbar position, lift lumbar to desired height and release. To reset height, lift to top.

Care Instructions

With regular care and maintenance, your CXO™ will provide many years of superior performance and satisfaction. To maintain the quality of your Nightingale chair, please follow the cleaning instructions outlined here.

Mechanism

Once a year, lubricate using light sewing machine oil or similar product. (Spray with plastic straw attached to sprayer). NOTE: To prevent dripping, avoid over lubrication which may cause damage to surrounding surfaces.

ABLEX™ Mesh

Clean with mild detergent and water applied with a clean damp cloth or sponge. Rinse with a damp (water) cloth and let dry. Never use hot water and avoid scrubbing. Use gentle movements.

Plastic Parts

To clean, spray with a mild detergent and wipe off using a damp (water) cloth. Do not use abrasives or excessive amounts of cleaner.

Frame

Powder coat frames can be cleaned by wiping with a damp cloth and any mild detergent.

*The instruction for the care and maintenance of Nightingale Products are provided to you as a service. No warranty is implied since results may vary.

FOR MORE INFORMATION, PLEASE VISIT

www.nightingalechairs.com



Nightingale Corp.
T 1.800.363.8954
F 1.800.637.6784
www.nightingalechairs.com
info@nightingalechairs.com



RECYCLABLE